

guzzie+Guss  
**Perch**  
Hook-on Chair

Imported in North America by:  
Peter John M. Distributions Inc.  
#114 – 6951 – 72nd Street  
Delta, BC, Canada V4G 0A2

info@guzzieandguss.com  
North America: 1-888-597-0992  
Fax 1-604-940-4462

Please read this instruction manual carefully before using this product. Be sure to save these instructions for future reference. Your child may be hurt if you do not follow the instructions.

Thank you,  
We thank you for purchasing the Perch. We are honored that you have decided to trust us and to offer this gift to your little one. At guzzie+Guss, we are committed to developing quality products, clever and easy to use with great attention to make your life and that of your children easier so you can focus on more important things. We hope you and your baby will love your Perch hook on chair.

## IMPORTANT

---

It is important that you read and follow the instructions in the manual. Please ensure that all parts are properly attached and moving parts in working order. Please pay special attention to the assembly and installation of the Hook on Chair. Read all warnings and safety precautions before using. Having read and followed all instructions in this manual, please keep it in a safe place to review if necessary. If you have a problem with the installation of the Perch or use, please contact guzzie+Guss at [info@guzzieandguss.com](mailto:info@guzzieandguss.com). A member of our team will be very happy to help you. You will be asked to provide us the product number and date of manufacture; this information can be found on the frame of your hook on chair.

## CLAMP PARTS

---



## WARNINGS



# WARNING!

**Failure to follow these warnings and the instructions could result in serious injury or death.**

**Fall Hazard. To prevent falls:**

- ALWAYS use the restraints, adjust to fit snugly
- Keep table and seat clean and dry to prevent slipping.
- To prevent tip over, check stability of table before and after seating child.
- Never Leave child unattended, Always keep child in view while in the Hook-on chair.

**Never use on a:**

- glass table top
- loose table top
- single pedestal table
- card table
- table leaf
- table cloths or placemats (other than the guzzie+guss silicone placemat) .

**Child can use nearby objects to push chair off,  
NEVER use the hook-on chair:**

- with ordinary chair underneath
- in reach of table legs
- near island below counter

Use only for children up to: 37 pounds (17kgs)

Use only for Children who can sit up without help

Use only for tables 0.6 inches to a Max of 3.75 inches thick (15mm to 95mm)

▲ **WARNING:** Do not use without all tips (suction cups or other locking/latching mechanisms) attached securely to table surface

▲ **WARNING:** Discontinue use if child, when seated in hook-on chair, is able to move the hook-on chair arms on the table top.

▲ **WARNING:** Do not allow other children to play near or walk under hook-on chair while in use. Before removing child from hook-on chair, be sure child's legs are free from hook-on chair supports.

▲ **WARNING:** Discontinue use if hook-on chair is broken, contact guzzie+guss immediately for replacement parts

 
▲ **WARNING:** Keep coverings, plastic bags away from children to avoid suffocation, these are not toys

# INSTALLING THE PERCH

## KEEP INSTRUCTIONS FOR FUTURE USE.

The table surface must be a minimum thickness of 15mm (0.6 in) and no more than a maximum thickness of 95mm (3.75in).


Slip the table chair onto the table lip/edge. 100% of the Top Paws must be in contact with the table surface.

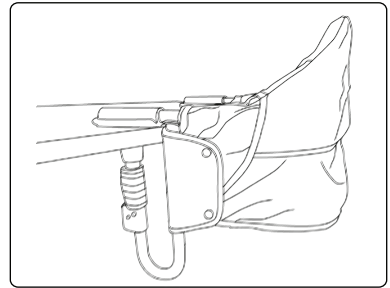

Raise the height adjustment bar as high as possible.



 Locate the tightening cap on the top of the height adjustment bar and turn to tighten the height adjustment bar against the bottom of the table.

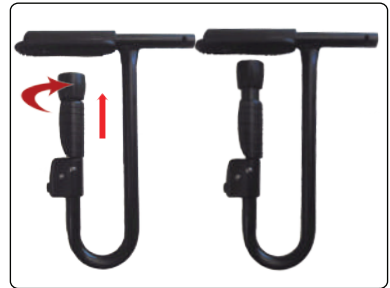


**IMPORTANT:** Periodically check that the height adjustment bar is securely tightened.

**WARNING:** Always inspect the hook-on chair before use and make sure it is working correctly, that it is not damaged. Discontinue use if hook-on chair is broken.

## UNINSTALLING THE PERCH
 
### KEEP INSTRUCTIONS FOR FUTURE USE.

Locate the cap on the adjustment bar and slightly turn to loosen the height adjustment bar.

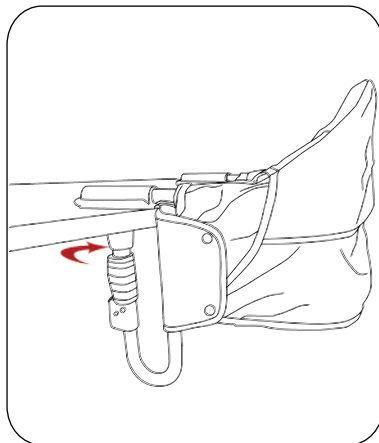

Press on the height adjustment button to release the tension completely, and then remove the hook-on chair from the table.



Discontinue use if hook-on chair is broken. Contact guzzie+Guss immediately for replacement parts or service.

**WARNING:** Never attempt to uninstall or close your hook-on chair with your child inside. Make sure your child is clear of moving parts.

Do not use without all locking/latching mechanisms attached and tightened securely to table surface.


## Using the Harness

 ---

The Perch is equipped with a 5-point adjustable harness system. The length of the shoulder straps can be changed by sliding the buckle on each shoulder strap.

The waist belts are adjustable on either the right or left by using the adjustment buckles on the waist strap.

To use the 5-point harness, insert the 2 waist strap tongues into the center crotch strap buckle from the right and left. The shoulder straps do not need to be detached each time the child is removed or seated in the chair.

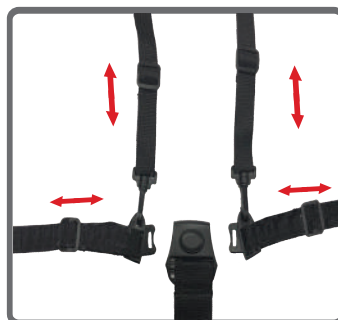

**WARNING:** Always fasten the 5-point harness securely and properly around the child's body whenever the child is seated in the chair.

**WARNING:** Never leave the child unattended when seated in the chair.

The Perch is also equipped with a unique rear harness clip, which allows you to adjust the shoulder straps position on your child's shoulder.



## CARE & MAINTENANCE

---

- Regularly check the Perch for any damage or for missing components. Use only guzzie+Guss approved replacement parts available through authorized service centers.
- To clean the frame, wipe metal tubing with a soft damp cloth and mild soap or cleaning solution. Do not polish or use harsh abrasives.
- To wash the seat fabric, first remove the enclosed seat board. Fabric can be hand or machine washed. Use cold water and mild detergent in the gentle cycle.
- Do not use a dryer to dry fabric, only hang or air dry.
- Do not use any bleach based products to clean the Perch.
- Always dry metal parts to avoid the formation of rust.
- Continued and extended exposure to sunlight and the elements can change the colour of many materials. To avoid fading, always cover and store in a shaded area.
- To keep the fabric from shrinking, always place the seat fabric on the frame while still wet.
- For spot cleaning, use a damp cloth and mild soap, then air dry completely before storing.
- Always check the strength of the fabric each time the fabric is washed.
- Always store in a well ventilated area.



## LIMITED WARRANTY

---

Your guzzie+Guss item is warranted to be free from any manufacturing defects for 1 year from the date of purchase under normal use and in compliance with the operating instructions. This warranty cannot be extended and an extended warranty cannot be purchased. This warranty is not transferable and extends only to the original retail purchaser and is only valid when supplied with proof of purchase. PLEASE RETAIN PROOF OF PURCHASE FOR THIS LIMITED WARRANTY. The warranty is valid only in the original country of purchase (1 year on the frame, 90 days on the fabric).

This warranty is subject to the conditions set forth by country in which the items were purchased. Conditions may vary. guzzie+Guss will not ship replacement or repair parts out of the country of purchase. guzzie+Guss will provide replacement parts or conduct repairs as determined fitting by the company. guzzie+Guss reserves the right to exchange item with a replacement part. Some parts may be replaced with newer model parts as the items are improved over time. Please NOTE that all issues will NOT be covered by this warranty if it is deemed that your unit has been damaged because of misuse or neglect of regular maintenance.

Warranty is nullified if:

- The issue is caused by misuse or poor maintenance. Please refer to this instruction booklet for guidance on use and maintenance.
- Damage is caused by improper installation of guzzie+Guss parts and/or accessories. Please refer to this instruction booklet for guidance on assembly and use.
- Damage is corrosion, mold or rust caused by lack of maintenance or service.
- Damage is due to general wear and tear, which is the result of everyday use or negligence.
- Damage is caused by sun intensity, sweat, detergents, damp storage or frequent washings.
- Repairs or modifications are carried out by an unauthorized third party.
- Item is purchased from an unauthorized retailer. Approved retailers are listed on our website at [www.guzzieandguss.com](http://www.guzzieandguss.com)
- Item is second-hand.
- Item is damaged as a result of an accident, airline or freight damage.

guzzie+Guss reserves the right to determine if warranty terms and conditions have been met. Please contact your local distributor if you have any questions regarding warranty.